

# THE SPANKULATOR

## USER MANUAL

Greenface Labs -- 2023

## TABLE OF CONTENTS

Quick Start .....	3
Overview .....	4
Features .....	4
Signals .....	4
Operation .....	7
General Operation .....	7
Open Source Project .....	6
Trigger .....	8
Repeat Mode .....	8
CV Scale .....	9
Sig In .....	9
Screen Saver .....	9
Function Details .....	9
Up .....	11
Down .....	12
Stretch .....	13
Toggle .....	14
Maytag .....	15
LFO .....	16
User .....	18
Bounce .....	20
WiFi .....	21
Terminal Mode .....	23
Settings .....	26

## QUICK START

The Spankulator can be used in an endless variety of ways, but here is a great way to start exploring. These instructions are for use with a Moog Mother-32 but can be easily adapted to most modular synthesizers.

---

### MOTHER-32 SET-UP

- VCA Mode – EG (use the envelope generator)
- VCO Mod Amount – Zero
- VCF Mode – Low Pass
- VCF Mod Source – EG
- VCF Mod Amount – 0%
- Cutoff – 200Hz
- Resonance – 50%
- Attack – 5%
- Decay 10%
- Sustain – Off
- Frequency – 50%
- Pulse Width – 50%
- VCO Wave - Pulse
- Octave – 4
- Note – 8

---

### SPANKULATOR SET-UP

- Fxn – Down (use default parameters as shown in images below)
- Start Pulse Len – 100
- End Pulse Len – 10
- Num Pulses – 10
- Randomness – 0
- Initial Delay 100
- Repeat – On
- CV Scale – 50%

Connect the Spankulator Trig Out to the M-32 Gate Input, Tog Out to the M-32 VCF Cutoff Input and CV Out to the M-32 VCO Lin Input. Press Trigger on the Spankulator and you should hear a sound much like that found [here](#).

## OVERVIEW

The Spankulator is a WiFi-enabled multi-function Eurorack module. Its main function is to generate a trio of coordinated analog and digital signals which can be used in an endless variety of ways. While each output generates familiar signals, it is the coordination of these signals and the methods of control that make the Spankulator special.

## SIGNALS

- Trig Out – Digital signal that consists of pulses of varying width.
- Tog Out – Digital signal that toggles at the end of every sequence.
- CV Out – Analog signal (+/- 5 volt) that depends on the Function. Usually, it is relative to the pulse width of the Trig Output. This signal is modified using the CV controls.
- Trigger In – Digital input. Operation is triggered with a 0 to 5 volt transition on this input. This also serves as the External Clock when Ext Clk mode is enabled.
- Sig In – Analog signal input. Range: +/- 5 volt

## FUNCTIONS

- 5 Spank types – Up, Down, Stretch, Toggle and Maytag
- LFO with 4 waveforms – Sine, Inv Sine, Ramp Up, Ramp Down
- Bounce – A DVM plus a quantizable sample and hold. DC and optional AC modes
- User Mode – For sending sequences of Spanks and/or LFO bursts
- WiFi Mode – For configuring WiFi connection
- Settings – For module configuration, factory reset, etc.

## FEATURES

- 128x64 graphic display enhances usability
- Web and Terminal interfaces provide rich user experiences with the addition of computer resources like a keyboard, mouse, display and scripting.
- All settings are stored in Flash memory so that they are retained when power is off
- Selectable Single Shot or Repeat mode
- CV scale, offset and value are independently controllable via CV pot and Sig In
- CV Out can be Quantized
- Randomness can be added to most function ranging from 0 to 99%
- External Clock mode
- Inputs and Outputs are protected against damage during typical use

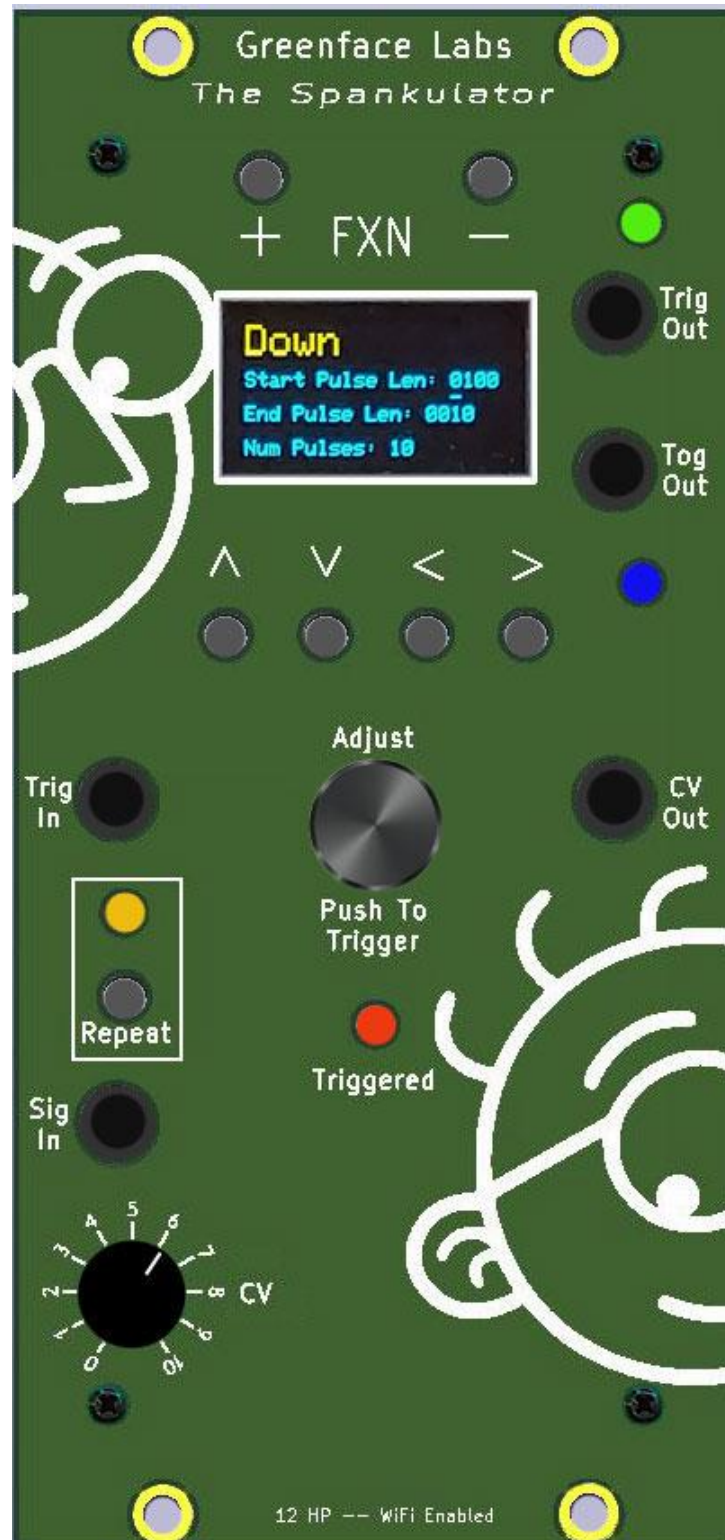


Figure 1 - Front Panel

## OPEN-SOURCE PROJECT

The Spankulator is an Open-Source project that has an Arduino 33 IoT at its core. The code is written in C++ and makes use of several public domain code libraries for managing the various purchased hardware components such as the display and the FRAM non-volatile memory.

Because it is Open Source, in addition to being used by musicians and sound designers to create new and amazing sounds, the Spankulator can be used by students and entrepreneurs to create new, amazing modules. And, of course, the open-source community will generally improve the product as times goes along. Links to the design repositories can be found on the Spankulator web page.

## OPERATION

### GENERAL OPERATION

(Please see the Terminal and Web Interface sections for more details)

- The Function is selected using the **+** and **–** buttons.
  - Terminal uses the **+** and **–** keys.
  - Web Interface has dedicated Function buttons.
  - Each function has one or more parameters.
- Parameters are adjusted using the arrow keys and the Adjust knob.
  - Parameters are selected using the **up** and **down** arrows.
  - Digit to be adjusted is selected by using the **right** and **left** arrows.
  - When entering strings, holding the **right** or **left** arrow down for 2 seconds inserts (right) or deletes (left) a character.
  - Use the Adjust knob to increment and decrement the selected digit.
  - Parameter values may be directly entered using the Terminal or Web Interface.
- Operation of each function is triggered by a variety of methods.
  - Pressing the Adjust button.
  - Receiving a low to high transition on the Trig In jack.
  - Terminal uses the **!** key to trigger.
  - Web Interface has a dedicated Trigger button.
- Trigger may be single-shot or repetitive.
  - Press the **Repeat** button to toggle the Repeat mode.
  - Terminal uses the **\*** key to toggle Repeat mode.
  - Web Interface has a dedicated **Repeat** button.
- CV Out amplitude, offset and value can be adjusted by a variety of methods.
  - Use the **CV** potentiometer or **Sig In**. Select adjust functions in **Settings**.
  - Terminal uses the **S**, **O** and **c** keys plus up to four digits. (Use the **z** key to refresh the screen after setting this parameter to see the result.)
  - Web Interface has a dedicated **Slider** control for each function.
- CV Quantization can be selected in Settings by the following methods.
  - Terminal uses **q0** to turn Quantization OFF.
  - Terminal uses **q1** to turn Quantization ON.

## NOTE ON CV INPUT/OUTPUT

The Spankulator is designed to operate on a +/-5V range. There are usage scenarios that require a different range (0-8V for example). For these scenarios, it is recommended that an external biasing module be used. The 4MS SISM module is recommended, but there are many others that would work.

## TRIGGER

The Spankulator is controlled by the user issuing Commands. Commands are initiated by pressing the front panel buttons or by using the Web or Terminal interfaces. Regardless of the source of the command, it will be called either a command or a keypress in this document.

The various functions that the Spankulator performs are called "Spanks" and will be referred to as such in this document.

All the Spankulator's functions are activated by a trigger. Triggers can come from various sources:

- Pushing the Trigger (Adjust) knob.
- Receiving a 0 to 5V transition on the Trig In jack.
- Receiving a Trigger command from either the Web or Terminal interface

When a Trigger is received, the Spankulator will execute a Spank that sends pulses at the Trig Out jack and varying voltage levels at the CV Out jack. When the Spank ends, the Tog Out jack will switch polarity from one to zero or vice versa.

## REPEAT MODE

If Repeat is set to OFF, the Spankulator will remain in whatever condition it was in when the Spank ended until it receives another Trigger.

If Repeat is set to ON, the Spank will continuously repeat.

In either case, receipt of another Trigger or Command will interrupt the Spank, stopping execution until a new Trigger is received.

The Trigger Indicator will be activated when a trigger is received and will be turned off when the trigger ends. The Trigger Indicator is a Red LED on the front panel and is a widget in the Web Interface. It is textually indicated on the Status line in Terminal mode.



## CV OUT

The CV Out signal ranges from -5V to +5V. The range can be adjusted from 0 to 100% by using the CV controls (CV Pot or Sig In). Use Settings to select *Scale* as the Adjust Function.

The CV Out signal can be offset by -5V to +5V. The offset can be adjusted using the CV controls. Use Settings to select *Offset* as the Adjust Function.

When the Trigger isn't active, the CV Out *Value* can be directly set using the CV controls.

Use Settings to select *Value* as the Adjust Function.

Web mode has a dedicated slider control for each CV parameter, and Terminal mode uses the S, O and c keys. See the table of remote commands for more details.

## SIG IN

The Signal In jack has a range of -5V to +5V. It is used by the CV Controls and the Bounce function.

For the Bounce function, Sig In is split into two parts, one AC coupled, and the other DC coupled. These signals are then scaled and biased to the 0 to 3.3V signal that the Arduino requires. More details about the Bounce function can be found later in this document.

## SCREEN SAVER

In order to maximize display life, the display will turn off after a set time. The default time is 15 minutes. The time can be set in the Settings function with a range of 1 to 9999 minutes.

Press any button or push the Trigger knob or send a 'z' via remote to bring the display back.

## RESET ON POWER ON

Holding down the + button when powering up will force a full reset to factory defaults. Unlike a reset done in Settings, this reset includes the WiFi parameters.

## FUNCTION DETAILS

The Spankulator has ten functions. These are listed below with their associated command index. Details for each function follow.

0. Up
1. Down
2. Stretch
3. Toggle
4. Maytag
5. LFO
6. User
7. Bounce
8. Web
9. Settings

## UP

Up Spanks send a sequence of pulses that increase in width to Trig Out.

The voltage level at CV Out is proportional to the current pulse width plus or minus a value that is calculated from the Randomness parameter. The voltage will be at the minimum when the Spank starts and will increase to the maximum when the Spank completes. This range and the mid-point can be adjusted by using the CV controls.

Parameter	Min	Max	Default
End Pulse Len	10	9999	100
Start Pulse Len	10	9999	10
Num Pulses	2	99	10
Randomness	0	99	0
Initial Delay	0	9999	100

The figure below illustrates an Up Spank with the default settings. The yellow trace is Trig Out and the purple trace is CV Out.

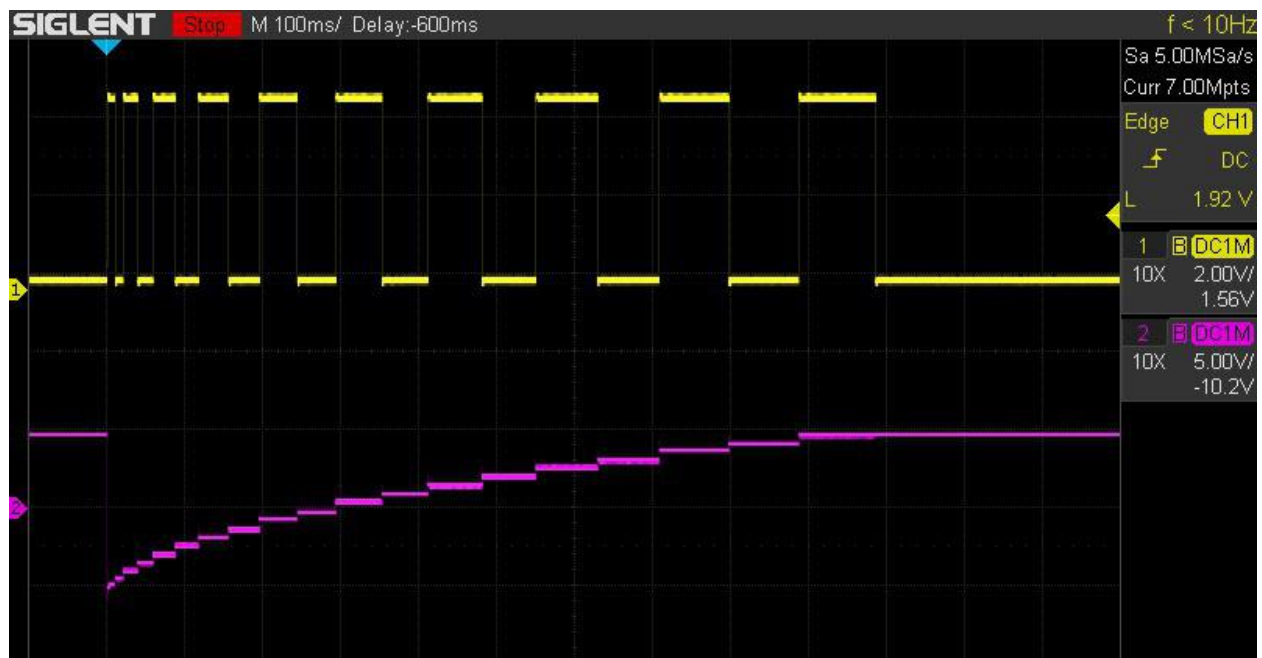


Figure 2 - Default Up Spank

## DOWN

Down Spanks send a sequence of pulses that decrease in width to Trig Out.

The voltage level at CV Out is proportional to the current pulse width plus or minus a value that is calculated from the Randomness parameter. The voltage will be at the maximum when the Spank starts and will decrease to the minimum when the Spank completes. This range and the mid-point can be adjusted by using the CV controls.

Parameter	Min	Max	Default
End Pulse Len	10	9999	10
Start Pulse Len	10	9999	100
Num Pulses	2	99	10
Randomness	0	99	0
Initial Delay	0	9999	100

The figure below illustrates a Down Spank with the default settings. The yellow trace is Trig Out and the purple trace is CV Out.

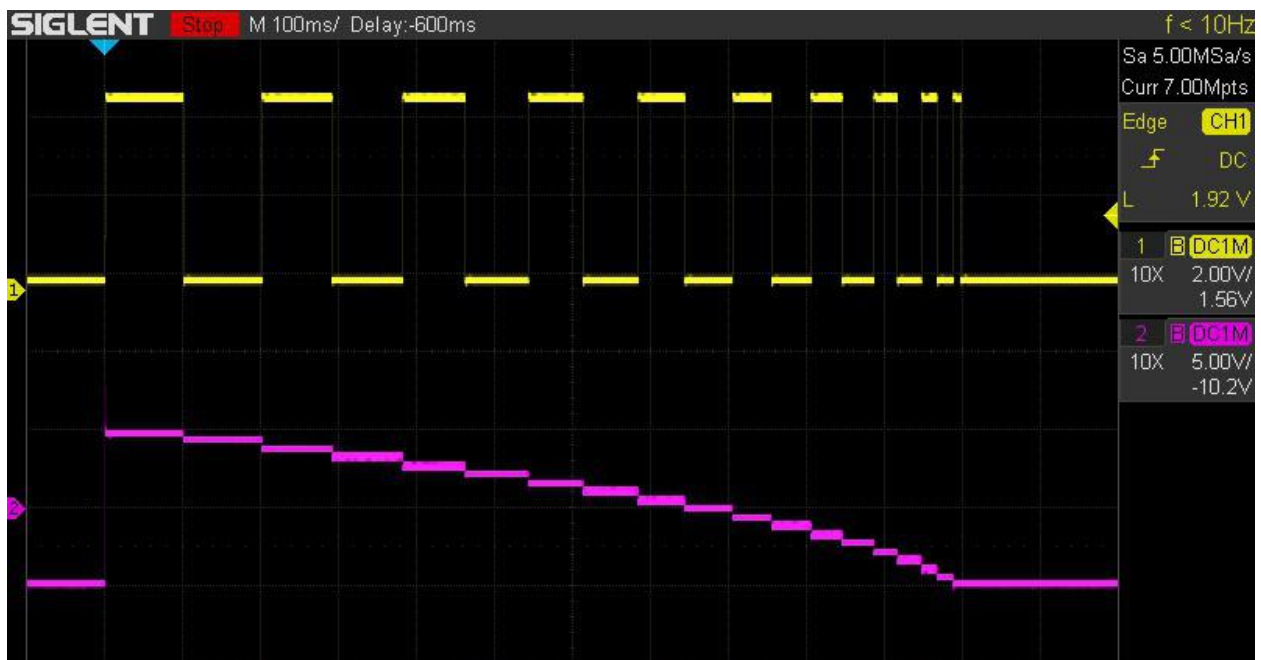


Figure 3 - Default Down Spank

## STRETCH

Stretch Spans send a sequence of pulses that are the same width to Trig Out. Each pulse is preceded by a delay which is set by the user.

The voltage level at CV Out is set by the user. Level 1 sets the voltage during the pulse and Level 2 sets the voltage during the delay.

Parameter	Min	Max	Default
Pulse Length	10	9999	10
Delay	10	9999	100
Num Pulses	2	99	1
Level 1	0	1023	1023
Level 2	0	1023	512

The figure below illustrates a Stretch Spank with the default settings. The yellow trace is Trig Out and the purple trace is CV Out.



Figure 4 - Default Stretch Spank

Notes: CV Output levels can be calculated using this formula:  $n = 102.3 * V + 512$  rounded down to the nearest integer. Where n is the value to enter in Level 1 or 2 and V is the desired output voltage. V ranges from -5V to +5V.

## TOGGLE

Toggle Spanks send a HIGH, LOW or the opposite of what is currently there to Trig Out.

The voltage level at CV Out is set by the user. Hi Level sets the voltage when the output goes HIGH and Lo Level sets the voltage when low.

Parameter	Min	Max	Default
Delay	1	9999	100
Hi Level	0	1023	1023
Lo Level	0	1023	0
State	LO	HI	Toggle

The figure below illustrates a Toggle Spank with the default settings. The yellow trace is Trig Out and the purple trace is CV Out.



Figure 5 - Default Toggle Spank

Notes: Toggle mode is useful for setting the output to a known state. Trig Out can be set LO, HIGH or Toggled to the opposite of what it currently is. The levels at CV Out can be set in a similar fashion to Stretch Spanks.

## MAYTAG

Maytag Spanks send a sequence of pulses of random width to Trig Out. The timing between pulses is determined by Pulse Len. The pulses are sent after the Initial Delay.

The voltage level at CV Out is proportional to the current pulse width plus or minus a value that is calculated from the Randomness parameter. The range and the mid-point can be adjusted by using the CV controls.

Parameter	Min	Max	Default
Pulse Len	10	9999	100
Initial Delay	0	9999	500
Num Pulses	2	99	20

The figure below illustrates a Maytag Spank with the default settings. The yellow trace is Trig Out and the purple trace is CV Out.



Figure 6 - Default Maytag Spank

## LFO

LFO Spanks send a Sine wave, an Inverse Sine wave (cosine), a Ramp-Up or a Ramp-Down wave to CV Out. This signal is modified by the Randomness parameter. Each LFO Spank also sends a pulse to Trig Out where the width is equal to the length of the LFO period.

The voltage level at CV Out is 10V peak to peak. The Period is in milliseconds.

Parameter	Min	Max	Default
Period	2	9999	10
Waveform	N/A	N/A	SINE
Randomness	0	99	0

The figure below illustrates an LFO Spank with the default settings. The yellow trace is Trig Out and the purple trace is CV Out.

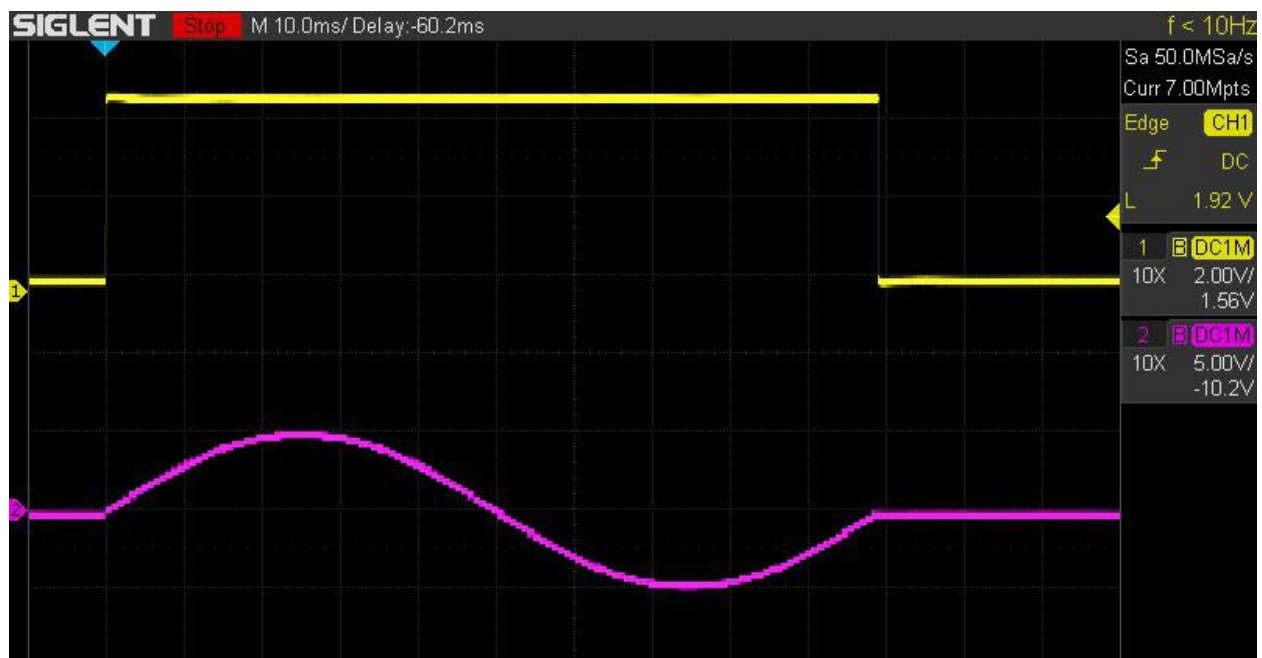


Figure 7 - Default LFO Spank

The LFO function displays the waveform when CV adjustments are made. Press any key to return to the parameter display. The Web interface shows the waveform continuously. An example of this is shown in the figure below.



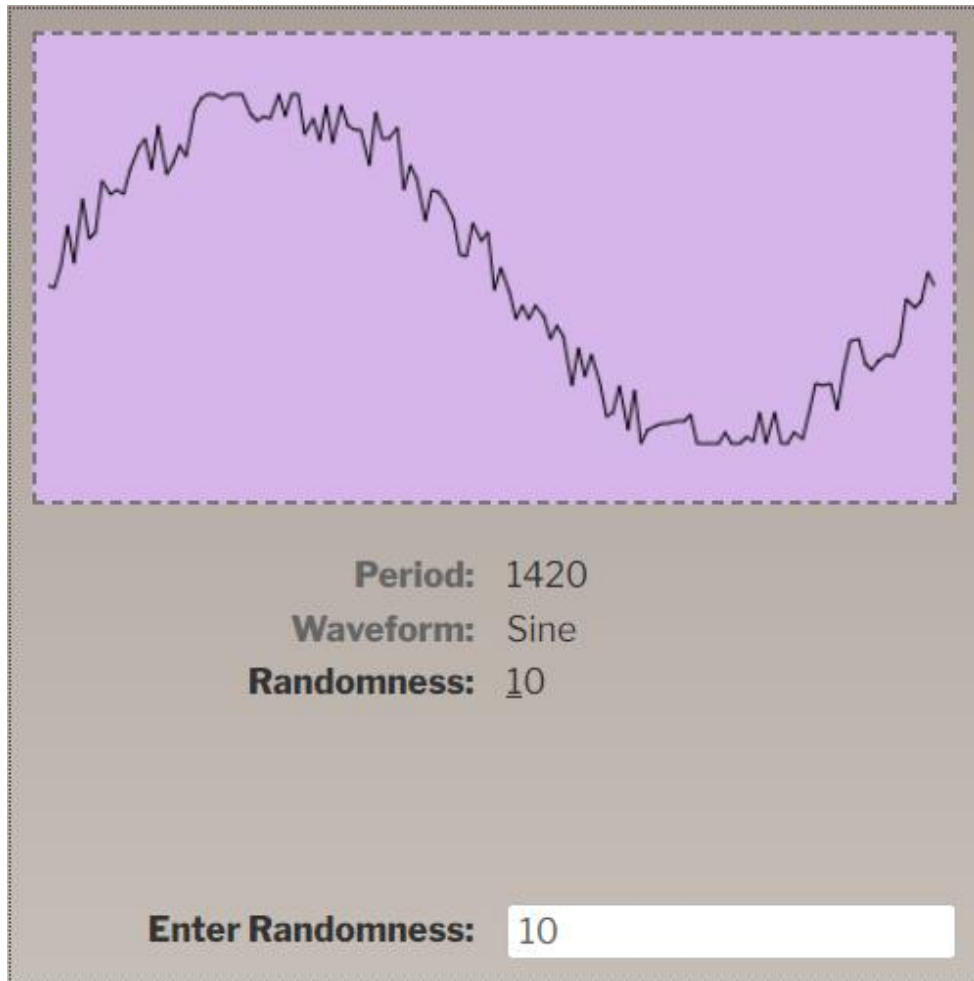


Figure 8

Notes:

When in Repeat mode, the waveform will be interrupted by the system in its basic loop. This interruption can be minimized by disabling WiFi in the Settings function.

## USER

The User function sends a sequence of Spanks. The User sequence is entered using the right and left arrow keys to select the sequence element and the Adjust knob to enter the Spank at the selected element. Sequence elements are deleted by choosing the blank Spank.

User Spanks

U – Up

D – Down

S – Stretch

T – Toggle

M – Maytag

L - LFO

Entering a Spank copies the main Spank parameters into the User Spank. For example, entering a 'U' will copy the parameters from the Up Spank into the User mode parameters at the position the U was entered. Once entered, these parameters can be adjusted. Each User Spank is a separate entity and can be edited without affecting other User Spanks or the Spank that was the initial source of the parameter data.

It is important to note that changing an element of the User sequence will overwrite all the data at the selected element with the data from the newly entered Spank.

Use the down arrow to edit an element's parameters. When in edit mode, the sequence highlight character will change from an underscore (\_) to a caret (^). The underscore will be used to highlight the edited parameter. Use the arrow keys to edit the various parameters and to return to editing the sequence.

The figure below illustrates a User sequence of DUSTM using default settings for all Spanks in the sequence. The yellow trace is Trig Out and the purple trace is CV Out.



Figure 9 - Example User Sequence

## BOUNCE

The Bounce function essentially is a Sample & Hold with extended features. Bounce operates in four modes: DC, DC Quantized, AC and AC Quantized. It measures the voltage at Sig In when a Trigger occurs and then “bounces” that voltage to CV Out. It also generates a 732Hz PWM signal at Trig Out with the duty-cycle proportional to the measurement.

When used in AC mode, Bounce acts as an Envelope Follower.

Mode	4% Duty Cycle	96% Duty Cycle
DC	-4.6V	+4.6V
AC	0V	10V pk-pk
DC Quantized	-4.6V	+4.6V
AC Quantized	0V	10V pk-pk

The basic accuracy of the measurement is 1%

AC is measured as True RMS. For a Sine wave this is  $\frac{V_{pk}}{2*\sqrt{2}}$  (Freq: 200Hz – 2000Hz)

Note that the Bounce function operates independently of the Quantize parameter in Settings.

Also note that the AC functions are optional and need the switched cap filter chip to be installed. Please contact the factory if you want these functions.

## WIFI

The Spankulator is equipped with a 2.4GHz WiFi interface. When connected to your network, you can control the Spankulator using the [Web Interface](#) (see example screen below).

WiFi can be disabled in the Settings function. Make sure it is enabled before proceeding in the connection process.

---

### CONNECTING TO WIFI

1. Enter WiFi function and press Trigger to scan for networks.
2. Use the up and down arrow keys to select your network. Press Trigger.
3. Use the right and left arrow keys with the Adjust control to select each character of your password. Press Trigger when your password is entered. Note: It is much easier in Terminal mode. Type your password preceded by \$, then press Enter.

The Spankulator will try to connect using the password that you entered. If successful, the screen will display the connection data. This includes the connection status, the IP it can be found at and the signal strength. The signal strength will also be displayed in the upper right corner of the display as 1-4 bars. The signal strength display is shown in most functions.

If the connection fails, the Spankulator will give its best explanation of why it failed.

The Spankulator remembers its connection and will reestablish it if the power is recycled.

Visiting the WiFi function again while connected will display the connection data. Press Trigger to re-enter the scan for networks screen.

Re-scanning networks will reset the password, so it must be entered again to connect.

---

### USING WIFI

The Spankulator's Web Interface was designed to resemble the physical front panel. However, because the Web Interface enjoys the added functionality a computer brings, it has significant differences. Please refer to the following image.

Instead of Fxn+ and Fxn- buttons, there is a dedicated button for each function.

While you can still adjust parameters a digit at a time, you can now enter parameters from the keyboard by first clicking on the parameter then using the dedicated entry field.

Adjusting parameters digit by digit is possible by using the right and left arrows to select the digit and using the Inc and Dec buttons to increment and decrement the digit.

Clicking on the Trig Out and Tog Out indicators changes the state of those outputs.

The image shows a web interface for a device named "Spanky". The interface is organized into several sections:

- Header:** A cartoon character icon, the name "Spanky", and a refresh icon.
- Function:** A grid of buttons: Up, Down, Stretch, Toggle, Maytag, LFO, User, Bounce, WiFi, and Settings.
- Up Parameters:** A panel with input fields for "End Pulse Len: 0050", "Start Pulse Len: 2", "Num Pulses: 99", "Randomness: 20", and "Initial Delay: 100". It also includes up/down arrows and "Up" and "Dn" buttons.
- Digital:** Controls for Repeat (yellow circle), Trigger (grey circle), Trig Out (green circle), Tog Out (blue circle), Ext Trig (Enabled button), and Clock (Internal button).
- Analog: Quantized:** Three sliders for Value (0.01V), Scale (100%), and Offset (0.38V).
- Macro:** A text input field with a cursor, and buttons for Record, Play, Erase, and Take Snapshot.

Figure 10 - Web Interface Example

## TERMINAL MODE


Terminal mode is accessed via the MicroUSB connector on the Arduino that is on the bottom of the Spankulator. It is always available and cannot be turned on or off.

Use a terminal emulation program like PuTTY that has VT-100 mode. The Spankulator is set to run at 115200 baud but will adapt to the PuTTY settings.

Please refer to the table of commands that follows this section.

---

## TERMINAL EXAMPLE SCREEN

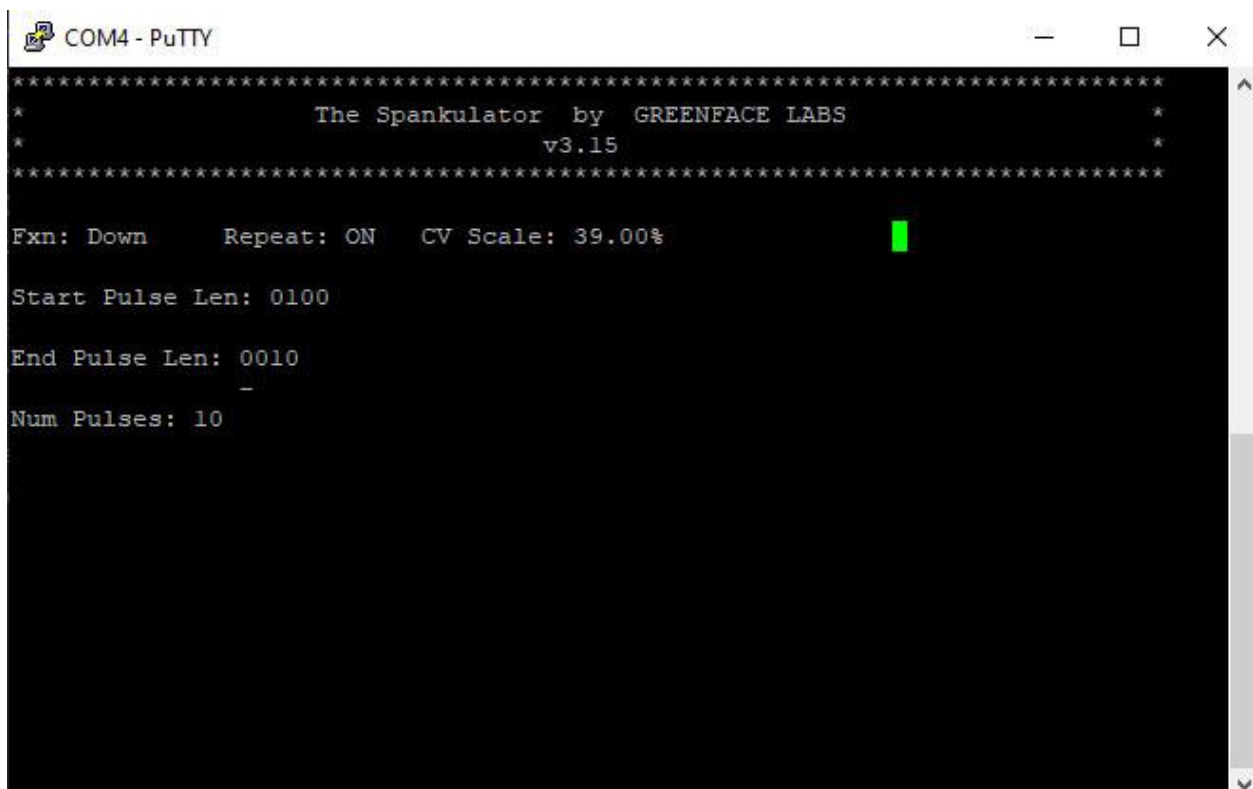

```
COM4 - PuTTY
*****
*               The Spankulator by GREENFACE LABS               *
*                               v3.15                               *
*****
Fxn: Down      Repeat: ON    CV Scale: 39.00%
Start Pulse Len: 0100
End Pulse Len: 0010
-
Num Pulses: 10
```

Figure 11 - Terminal Interface Screen

**Important!** Only connect USB to a powered-up system. Otherwise, the 5V power from the USB will try to power the entire rack. And that's not really good. So, please disconnect the USB cable before you turn off the power or use the Du Dad.

## SPANKULATOR REMOTE COMMANDS

Command	Front Panel	Terminal	Web
Go to Settings		&	Click Settings
Next Function	+	+	Next
Previous Function	-	-	Prev
Previous Parameter	^	[A	^
Next Parameter	v	[B	v
Next Digit	>	[C	>
Previous Digit	<	[D	<
Increment Digit	Adjust clockwise	u	Inc
Decrement Digit	Counter-clockwise	d	Dec
Toggle Repeat	Repeat	*	Repeat
Toggle Trigger	Push Adjust	!	Trigger
Disable Displays		Z	
Restore Displays		z	Refresh Browser
Insert blank char	Hold >	i	
Delete char	Hold <	Backspace	
Go To Function		fx	Click Fxn Name
Select Parameter		px	Click on Param
Select Digit#	Use Arrow Keys	:xx	Use Arrow Keys
Enter Parameter		xxxx	Use Param Input
CV Offset	Use Adj	Oxxxx	Use Offset slider
CV Scale	Use Adj	Sxxxx	Use Scale slider
CV Out (scaled)		Cxxxx	
CV Out (unscaled)		cxxxx	Use Value Slider
Select User Seq	Use Arrow Keys	s	Use Arrow Keys
Display Off		Jo	
Display On		J1	
Trigger Off		to	
Trigger On		t1	
Trigger Toggle		t2	
Tog Out Off		To	
Tog Out On		T1	
Tog Out Toggle		T2	
Quantization Off		q0	
Quantization On		q1	
Trig Out Off		Go	
Trig Out On		G1	
Trig Out Toggle		G2	
Repeat Off		r0	
Repeat On		r1	
Repeat Toggle		r2	



Turn Off Display		Jo	
Turn On Display		J1	
Use Internal Clock		K0	
Use External Clock		K1	
Toggle Ext Clock		K2	
Disable Triggers		Do	
Enable Triggers		D1	
Toggle Trig Enable		D2	
Reset Triggers		D3	
Enable Ext Trigger		E0	
Disable Ext Trigger		E1	
Toggle Ext Trigger		E2	
CV Pot : Off		P0	
CV Pot : Scale		P1	
CV Pot : Offset		P2	
CV Pot : Value		P3	
Sig In : Off		V0	
Sig In : Scale		V1	
Sig In : Offset		V2	
Sig In : Value		V3	
For String Entry		\$xxxxxxx	

Notes:

- Commands with **yellow background** require the user to press Enter when using a terminal. **Not Required** when sending via Web (REST interface).
- CV Scale– Range: 0-4095 => 0 – 100%
- CV Value – Range: 0-1023 => -5.33V - +5.33V
- CV Offset – Range: 0-4096 => -5.33V - +5.33V
- Select User Sequence – Only active in user mode. Returns to User Sequence mode from parameter entry mode.
- Select Parameter – x means a single digit in the range of 0-n, where n = the number of parameters for a chosen function minus 1.
- Enter Parameter – xxxx means up to 4 digits depending on the parameter. The range also depends on the parameter. List items may be chosen, with 0 selecting 1<sup>st</sup> item.
- Disable Displays (Z) is used to speed up web-based scripting. Restore Displays by using the command 'z'. These commands affect both the OLED display and the remote terminal.
- Display On (J1) and Display Off (Jo) just affect the OLED display. Turning off the OLED display noticeably speeds up response when using the terminal interface.
- Inserting and deleting chars only work when entering strings.

## SETTINGS

The Settings function displays information about the Spankulator as well as allowing some adjustments to various system parameters. Refer to the table below.

Parameter	Min	Max	Default
Version	--	--	Displays version#
CV Pot	Off	Value	Off
Sig In	Off	Value	Off
Quantize	No	Yes	No
Clock	Internal	External	Internal
Encoder Type	Normal	Reverse	Normal
WiFi	Enabled	Disabled	Enabled
Screen Saver	1	9999	15
Reset	--	--	Push Trigger
Calibrate	--	--	Push Trigger

Notes:

1. **Version** shows the software version number. This is useful when communicating about bugs and questions.
2. **CV Pot and Sig In** functions affect the CV Out signal. They can be set to the following:
  - a. **Off** - Disconnected
  - b. **Scale** – Range: 0-100%
  - c. **Offset** – Range: -5.33V - +5.33V
  - d. **Value** – Range: -5.33V - +5.33V. Only active when the module is idle (NOT triggered).
  - e. **Note:** Parameters altered by CV Pot and Sig In will remain altered after the setting has been changed until they are altered by another action.
3. **Doubling Up** - When CV Pot and Sig In are set the same, special rules apply:
  - a. **Scale** – Signal is pre-scaled by Sig In, then scaled again by CV Pot.
  - b. **Offset** – Signal is offset by Sig In, then offset again by CV Pot.
  - c. **Value** – Signal is Sig In + CV Pot.
4. **Clock** can be set to External. In this case pulse lengths are irrelevant, but the levels at CV Out will be the same as they would in Internal mode. Feed the External Clock signal into Trig In.
5. **Encoder Type** takes the two types of rotary encoder into account. This makes them easier to purchase if one type is unavailable. If your Adjust knob is working opposite as it should, this is the setting that corrects it.
6. **WiFi** can be disabled here if you want to turn it off but retain your password.

7. **Screen Saver** prolongs the life of the OLED display. The screen will blank after the set number of minutes. Press any button to bring the display back.
8. **Reset** brings the Spankulator's parameters back to their factory defaults. Note that WiFi parameters are unaffected.
9. **Calibrate** is a factory-only setting. Do not use.

## SOFTWARE UPDATE

When a software update becomes available, it will be posted on the website as a zipped package. The package contains 3 files. Unzip these into an empty folder on your machine.

1. Bossac.exe
2. Spankulator.ino.bin
3. Update.bat

These files work for the Windows OS. Mac and Linux users must install the GUI version of bossac and use that instead. Bossa can be found at:

<https://www.shumatech.com/web/products/bossa>

Follow these steps to update the code. This procedure ensures that your rack won't be inadvertently powered by the USB +5 volt supply.

1. Note: If the update changes the EEPROM storage mapping, the unit will automatically initiate a Software Reset. Any stored settings will be lost, so make sure to save these settings before updating if they are important.
2. Turn off power to the rack and remove the Spankulator.
3. Leaving the power cable connected, place the Spankulator on a non-conductive surface. Make sure nothing touches the Spankulator that might cause a short.
4. Re-power the rack and plug micro-USB cable into the Spankulator.
5. Run update.bat. It will show available COM ports. Choose by entering the number of the port.
6. If it connects properly, you will see a bunch of text being printed to the screen. This can generally be ignored. If the update succeeds, the Spankulator will reboot as normal with the new software installed. You should see the new version number in the greet screen.

## CRASH RECOVERY

When things go wrong, as they sometimes do, the Spankulator might become unresponsive. When this happens, the program must be reset. Usually recycling the power\* will fix the problem, but occasionally things have gone so bad that the code must be reloaded.

Usually, following the above update process will work. But occasionally things might have gone so bad that a hardware reset must be performed. There is a reset button on the Arduino 33 IoT. Pressing this twice quickly will force the Arduino into bootloader mode. You will see the yellow LED pulsate to indicate when the Arduino is in bootloader mode. The update process should work at this time. Please contact Greenface Labs directly if this doesn't work.

\*Make sure to unplug the USB cable before removing power.